


# Technical Information: Power Required To Heat Air

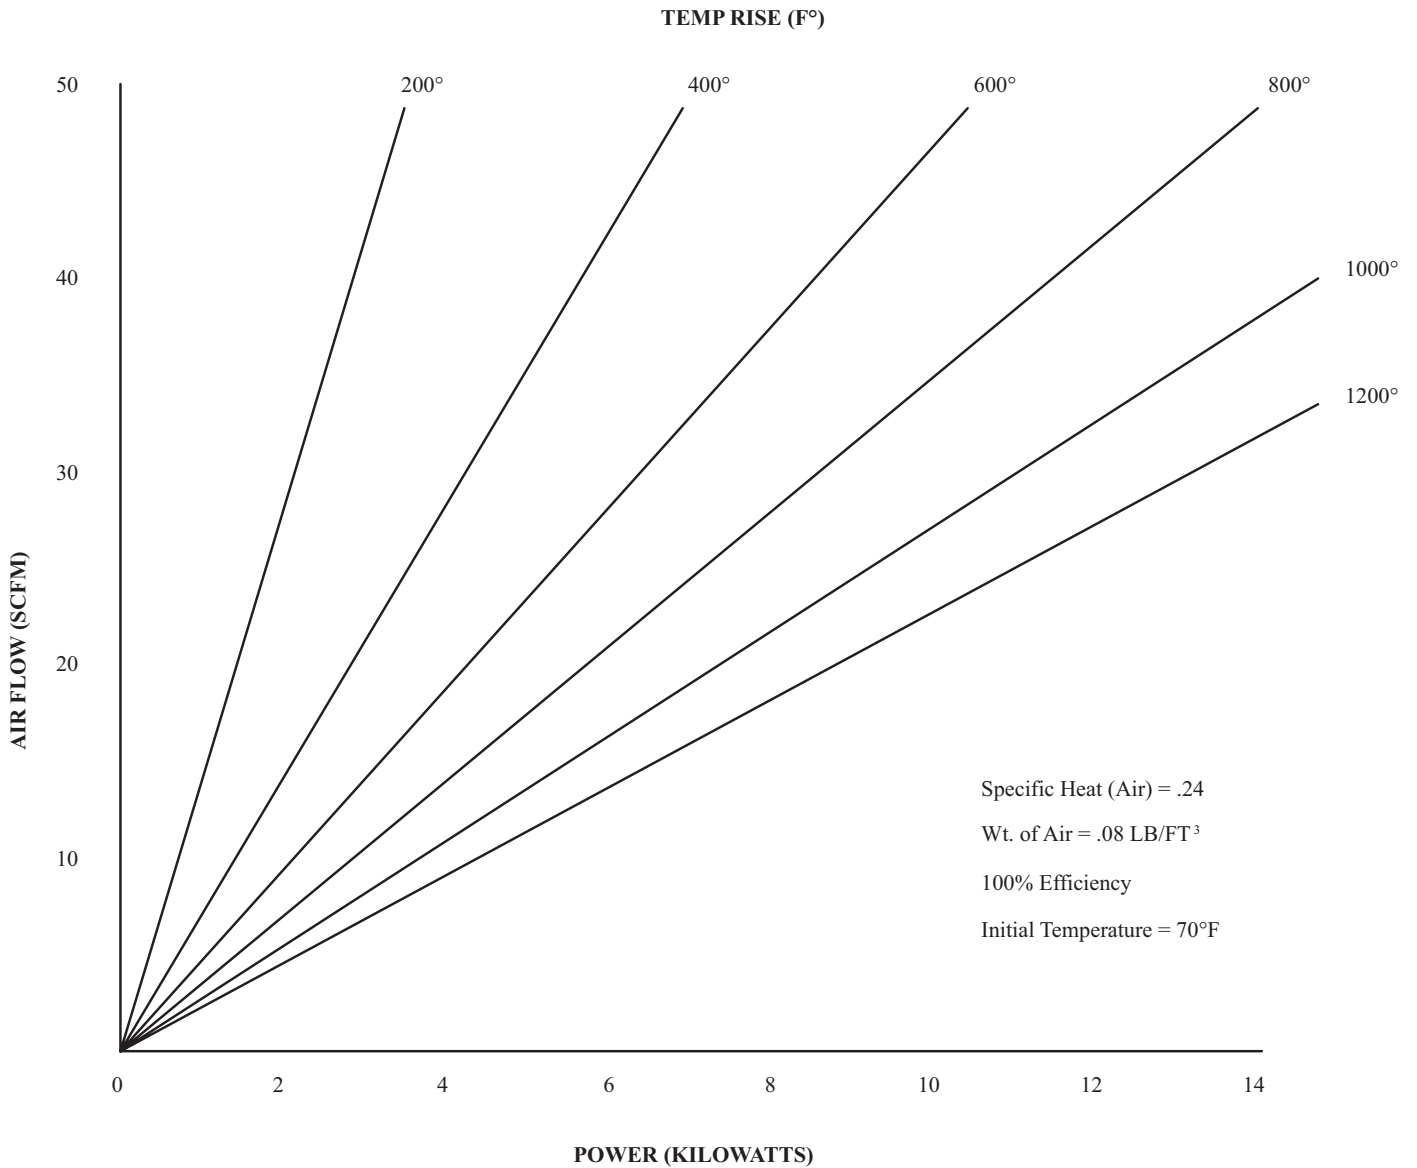

An approximation of air heating power requirements can be calculated with the following formula:

$$\text{KW} = \frac{\text{SCFM} \times \text{Temp Rise (F°)}}{3000}$$

Add 20% for Safety Margin